

Stormsure ZipPull Measure Table

Print this document at 100% size and then measure your zipper using the following chart.

Invisible




size 4




size 5

Plastic

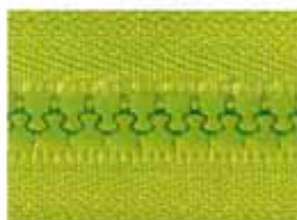

size 5

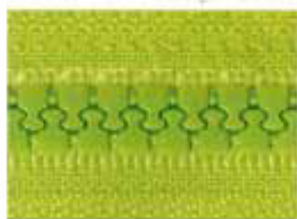

size 8




size 10


Metal



size 3

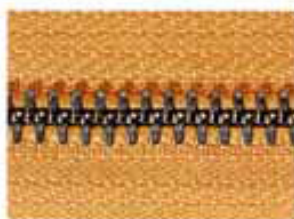

size 5

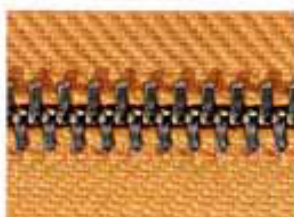

size 8



size 10

Coil



size 3



size 4



size 5




size 8



size 10

**Check your zip
against the chart**

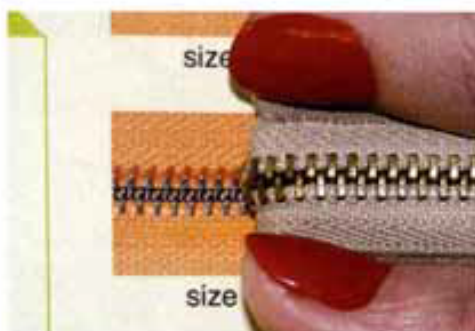

ZipPull Measure Table

Use this table to determine what size of zip puller you need.

Type of Zipper	Width inch	Height inch	ZlideOn
Coil	0.162 - 0.167	0.073 - 0.079	Size 3
Coil	0.193 - 0.201	0.083 - 0.091	Size 4
Coil	0.249 - 0.259	0.102 - 0.108	Size 5
Coil	0.280 - 0.287	0.110 - 0.114	Size 8
Coil	0.402 - 0.413	0.154 - 0.165	Size 10
Metal	0.179 - 0.193	0.075 - 0.079	Size 3
Metal	0.224 - 0.240	0.094 - 0.106	Size 5
Metal	0.289 - 0.299	0.114 - 0.126	Size 8
Metal	0.339 - 0.350	0.148 - 0.157	Size 10
Plastic	0.228 - 0.244	0.110 - 0.118	Size 5
Plastic	0.228 - 0.312	0.114 - 0.154	Size 8
Plastic	0.339 - 0.350	0.148 - 0.157	Size 10
Invisible	0.193 - 0.201	0.083 - 0.091	Size 4
Invisible	0.249 - 0.259	0.102 - 0.108	Size 5

How to replace your old Zip



No need to replace the whole zipper. Using ZipPull, it's faster and easier than ever to repair the zipper.



1. Remove the old slider, simply by using a pair of side cutters.



2. To open the ZipPull, push the lower part / jaw down with your thumb and push the puller backward until it opens.

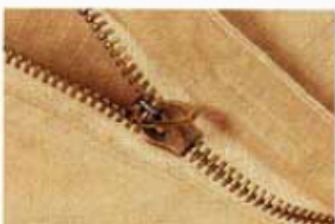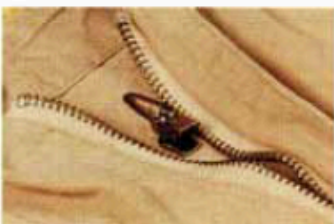

3. Place the open ZipPull, at the beginning of the zipper and press the two jaws of the ZipPull, firmly together and it is ready to use.